

Constant Load Weight



Constant Load Weight Installation:

1. Loosen the set screw on the Constant Load Weight
2. Slide the Constant Load weight onto the lower barrel of the gauge
3. Position the Constant Load Weight so that the ½" gauge foot protrudes approximately .002 - .003" past the Constant Load Weight (the Constant Load Weight should be almost flush with the gauge foot)
4. Tighten the set screw on the Constant Load Weight

DO NOT OVER TIGHTEN SET SCREWS OR DAMAGE WILL OCCUR

Note: Increasing foot diameter can effect durometer readings. Rex Gauge Durometer Models 1500, H-1000, and 2100 are not recommended for use with constant load weights.

← Constant Load Weight

CHECK•LINE[®]—PRECISION QUALITY CONTROL INSTRUMENTS

Electromatic Equipment Co., Inc.
600 Oakland Ave.
Cedarhurst, NY 11516 —USA

Tel: (800) 645-4330 (USA & Canada)
Tel: (516) 295-4300
Fax: (516) 295-4399

Email: info@checkline.com
Website: www.checkline.com

For additional information or to place an order CALL TOLL FREE 1-800-645-4330