

## WTT-110B Quick Start Guide

1. Press START key to turn on your WTT-110B Wire Terminal Tester
2. Press UNITS key to select desired measuring units LB / N / KG
3. Press PEAK key to select Peak or Real-Time measuring mode
4. Insert wire sample into the appropriate size wire terminal slot
5. Open lever-clamp assembly and insert tail end of wire
6. Press START key to zero display and enter “live” measuring mode  
(Units indicator will flash, indicating “Live Mode”)
7. Pull lever to apply force to wire and perform wire terminal pull out force measurement
8. The “live” measurement mode will time out 5 seconds after pressure is released
9. Repeat from step 4 for continued testing