



max. 4xTS1 – Sensor to SC4-PM to PC

outputs: RS 422 and alarm

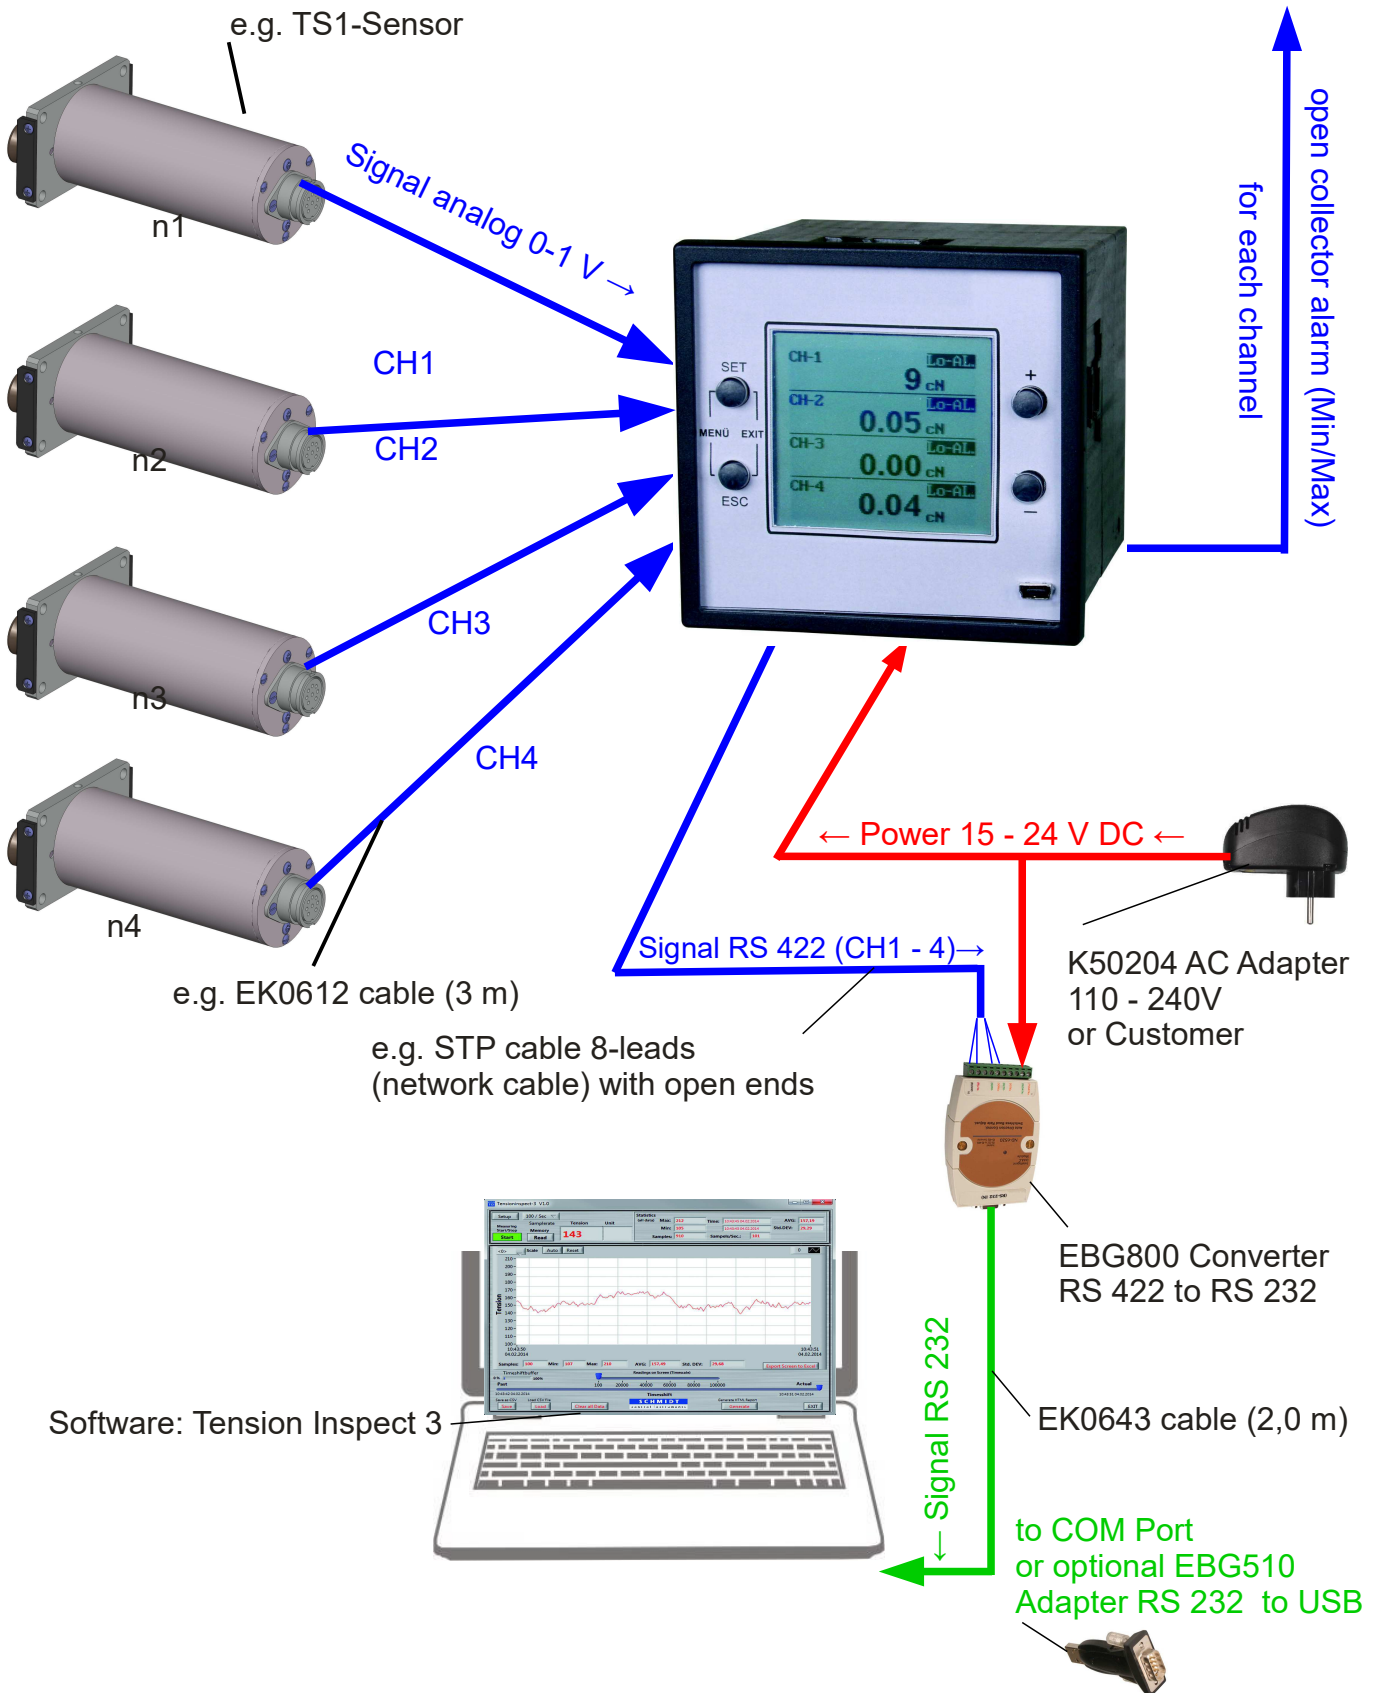

max. 4xFS1 – Sensor to SC4-PM to PC

outputs: RS 422 and alarm

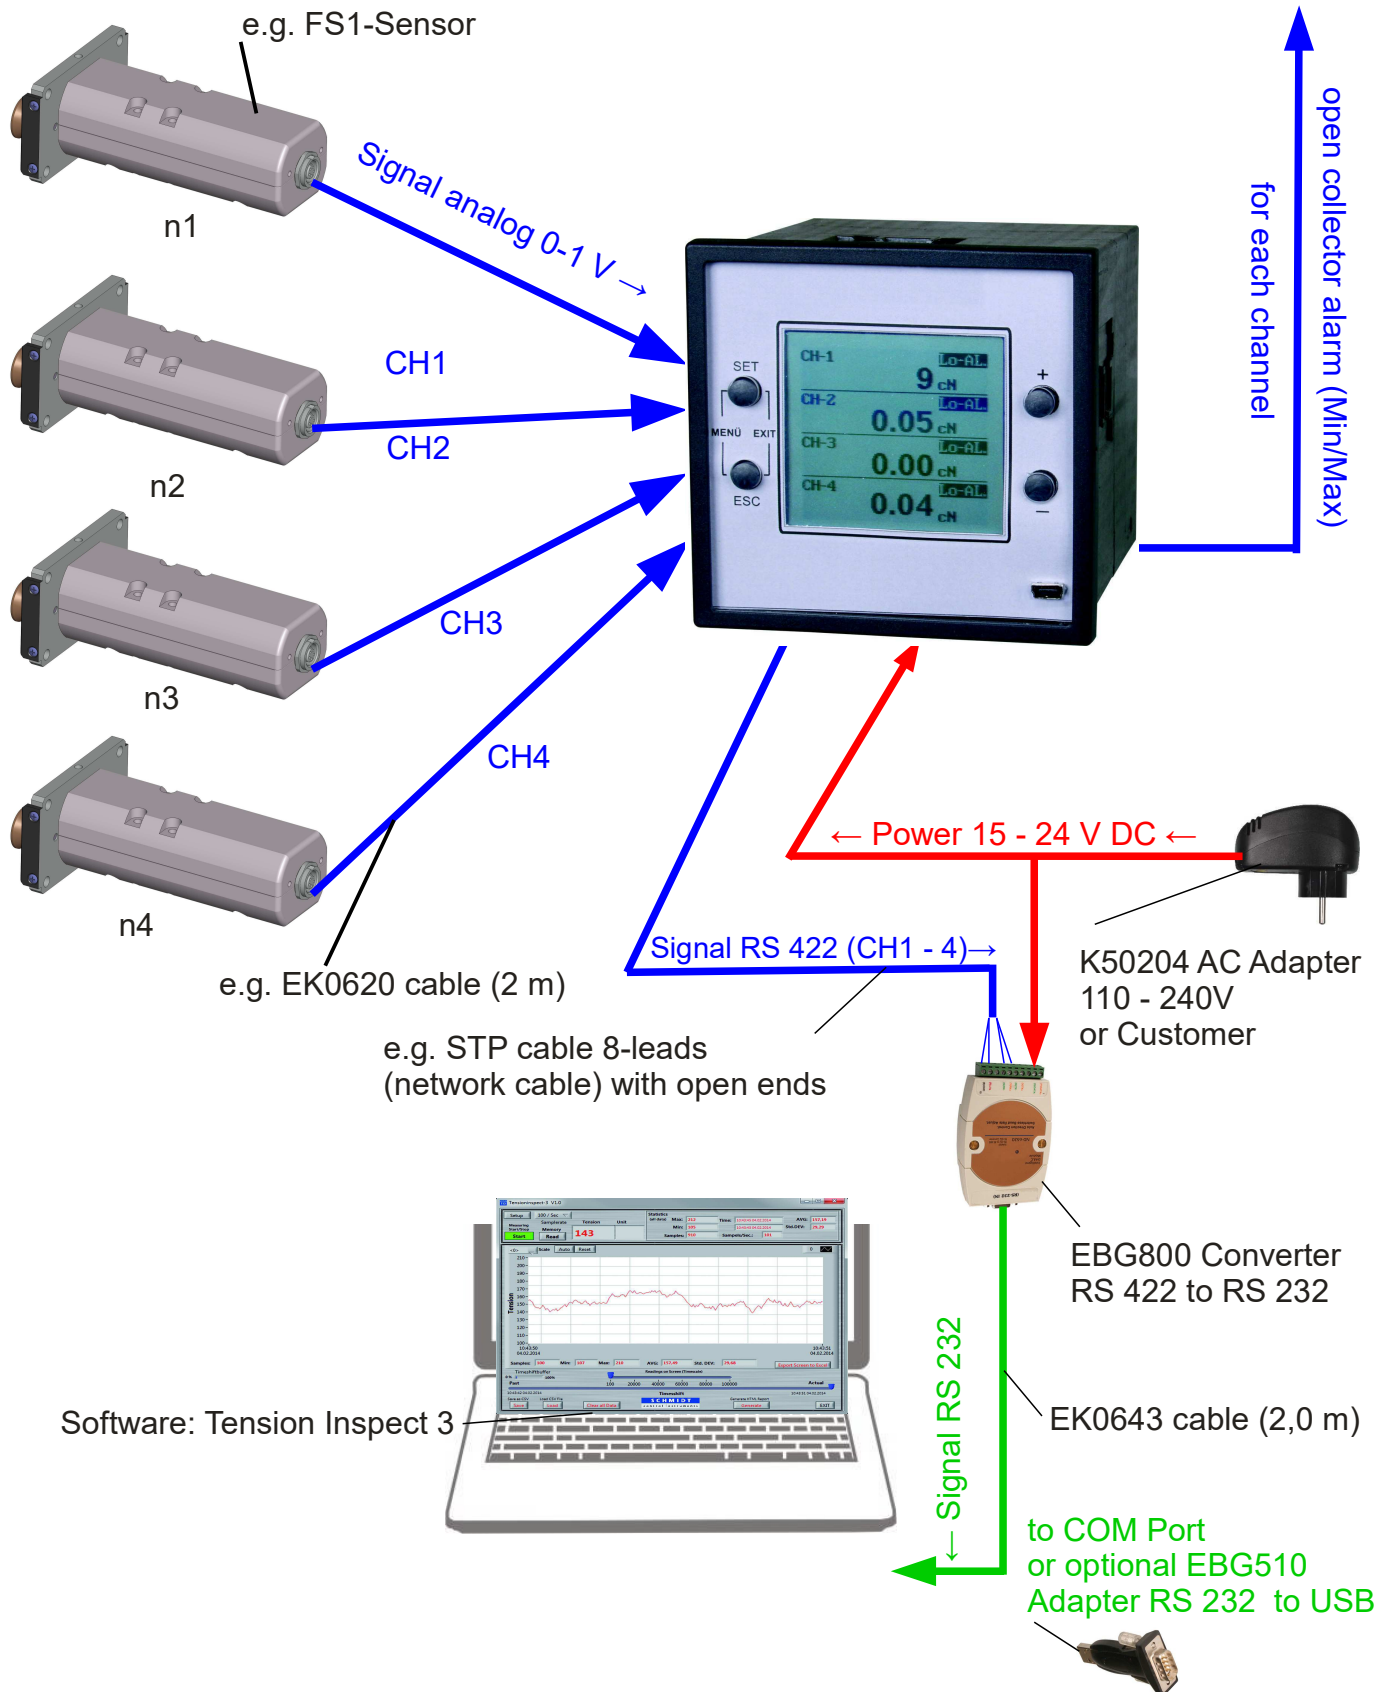

max. 4xMZ – Sensor to SC4-PM to PC

outputs: RS 422 and alarm

