

ESR DIGITAL CRACK / PIT GAUGE

OPERATING INSTRUCTIONS

TECHNICAL DATA:

Resolution: 0.01mm

Range: 0-30mm / 1"

Accuracy: 0.03mm

Protection Level: IP54 Optional

Measuring Speed: ≤ 1.5 m/sec.

Working Condition:


1. Temperature: 0~40 degree centigrade

2. Relative Humidity: $\leq 80\%$

Storage Temperature: -10~60 dc

Power: One button battery 1.55V

Base: 60mm and 125mm (Optional)

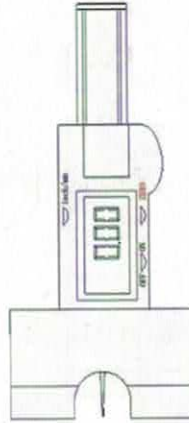

FUNCTIONS:

1. Power ON/OFF
2. Zero setting at any location.
3. Inch /metric system conversion.
4. Data output.

MANUAL INSTRUCTIONS:

1. Clean the LCD display screen, and the base with soft textile material.
2. Make sure the battery is in position and the positive pole is placed right.
3. Loosen the locking screw, press the power button and move the slider to see if it works properly.
4. Select a measuring system by pressing the mm/inch button.
5. Put the main body into the base, and screw tight. See below pic:

