

TWT-410

Torque Loader

Assembly Guide

Step 6 (final step)

Install TT-QCM torque tester with supplied bolts using 10mm hex driver (not included)



Assembled unit for reference



Checkline

175 Vincent Ave
Lynbrook, NY 11563

Email: info@checkline.com
Website: www.checkline.com
Tel: 516-295-4300

CHECKLINE®
MADE TO MEASURE

Step 1

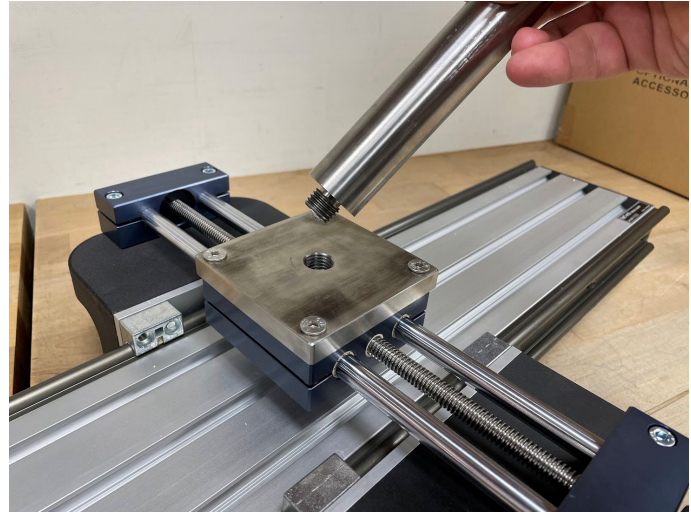
Slide on slide rail. Align it with rail on opposite side

**Step 2**

Place top rack assembly on slide rails. Line up mounting holes and install using supply bolts and hex key

**Step 3**

Install reaction post by screwing it into the threaded hole in the rack assembly

**Step 4**

Slide wrench leveling support onto the reaction post

