

Z Digital Instruction Supplement

Converting between units (Centinewton & Gram)

1. Power OFF unit
2. Remove screws A, B, C, D & E
Note: screws A, B, & C are different lengths
A 12.5 mm / **B** 14.5 mm / **C** 20.5 mm
3. Remove front housing to reveal dip switches under the LCD display
4. The display units is selected with Dip 3.
For cN move dip 3 UP to the off position
For G move dip 3 DOWN to the on position
5. Auto Power Off is selected with Dip 4.
By default Auto Power Off is on, to disable it
move jumper 4 DOWN to the on position.

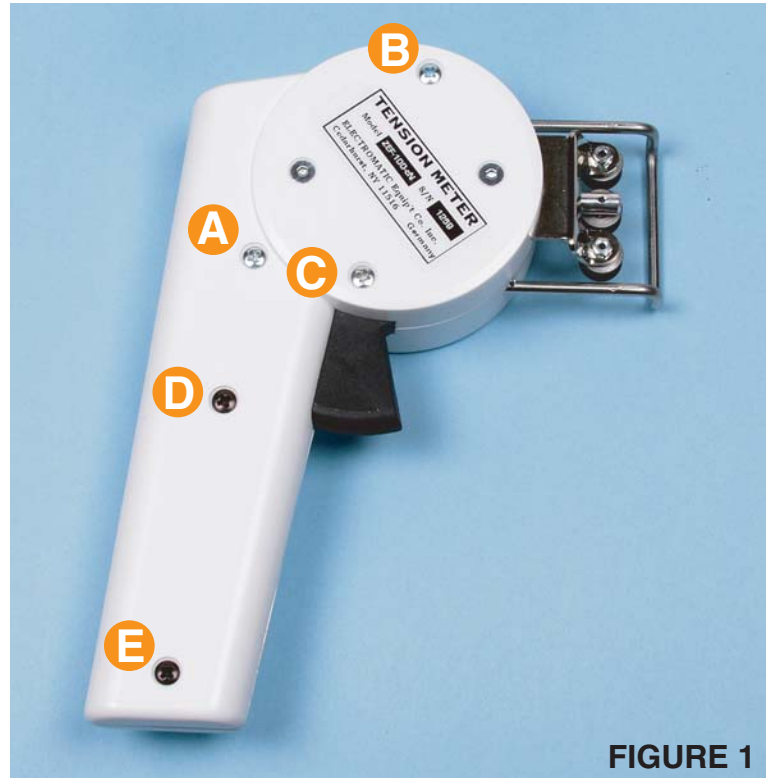


FIGURE 1

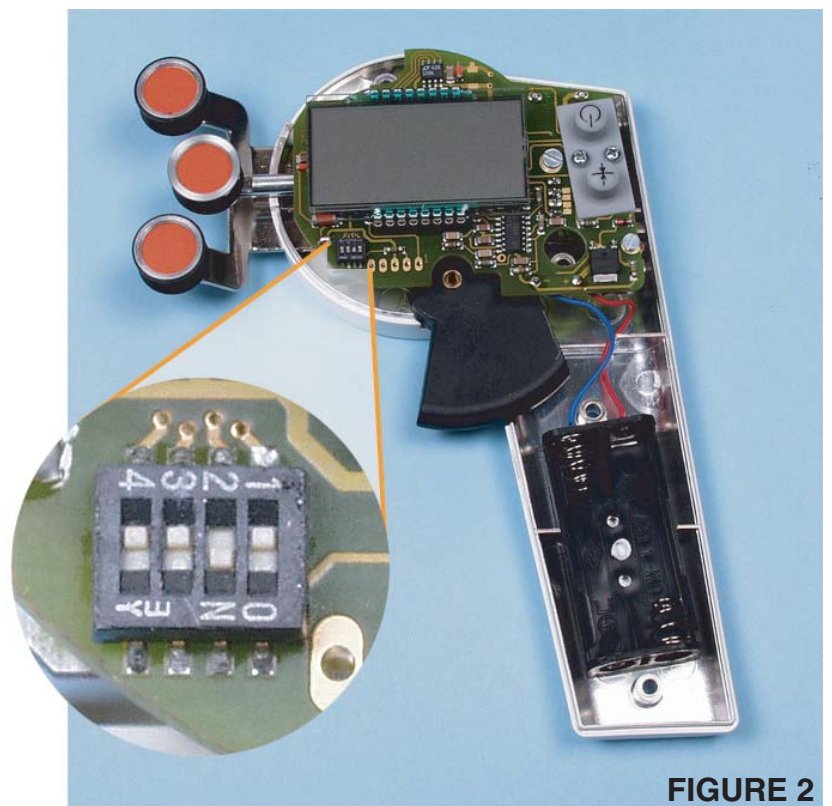


FIGURE 2